

การตั้งค่า DHCP และการจัดการ IP Address

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**




2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**

Enter the username and password for FiberHome router.


Username:

Password:

3. หลังจากที่ได้ Login แล้ว จะเข้าสู่หน้า Home

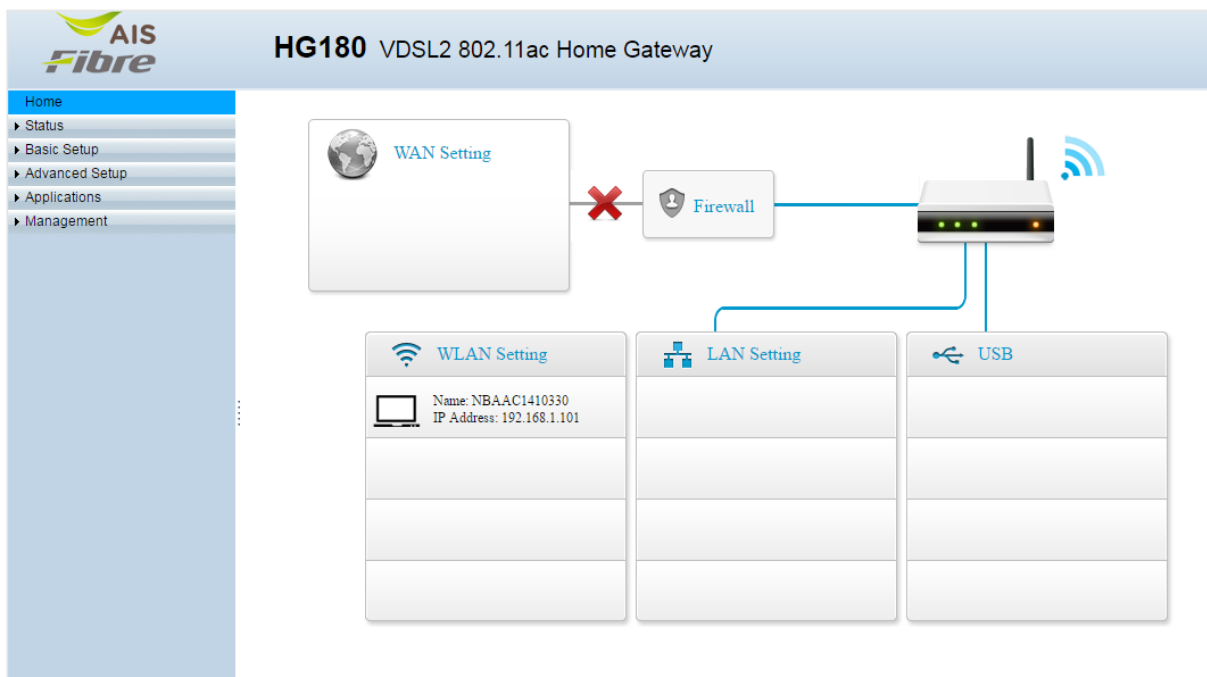

4. จากแถบเมนูทางด้านซ้าย เลือก **Basic Setup** -> **LAN** -> **IPv4 Configuration**
5. ในช่อง **IP Address** สามารถเปลี่ยนหมายเลข IP ได้ตามต้องการ
6. สามารถกำหนด **Range ของ IP** ในการแจกจ่ายได้ โดยต้องพิจารณาจาก Subnet Mask ด้วย
7. ทำเครื่องหมายในช่อง **Enable DHCP Server**
8. กด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

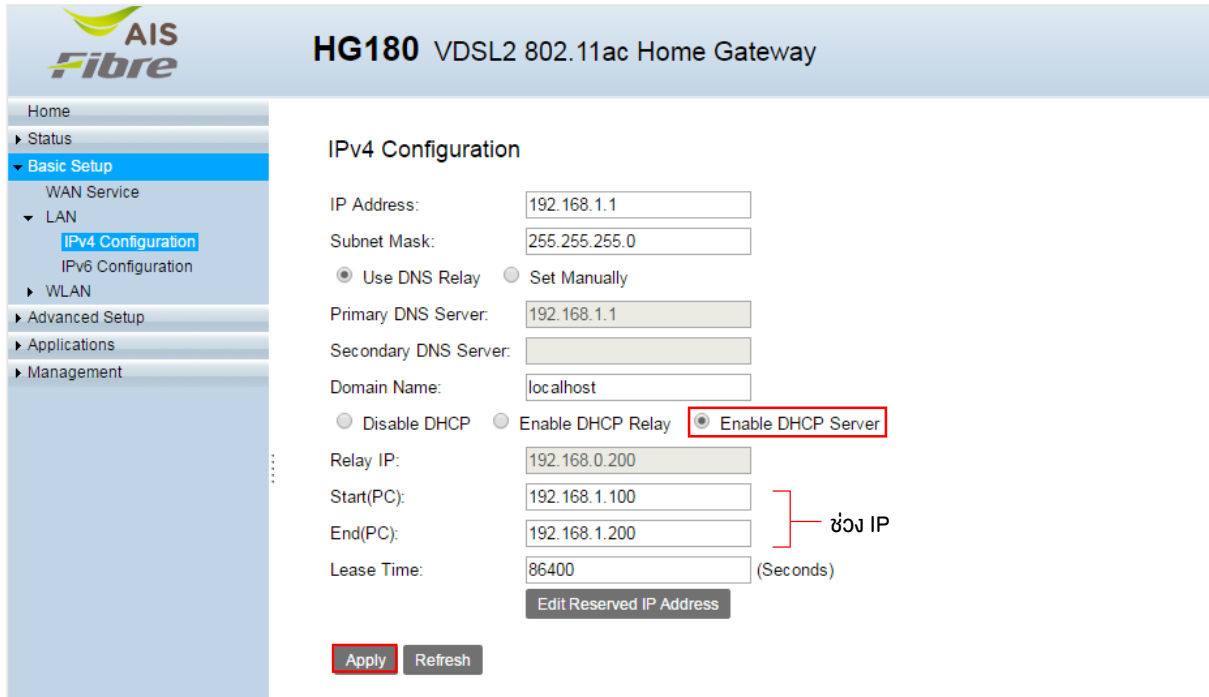

The screenshot shows the web interface of the AIS Fibre HG180 VDSL2 802.11ac Home Gateway. The left sidebar contains a navigation menu with the following items: Home, Status, Basic Setup (selected), WAN Service, LAN (expanded), IPv4 Configuration (selected), IPv6 Configuration, WLAN, Advanced Setup, Applications, and Management. The main content area is titled "IPv4 Configuration" and contains the following fields and options:

- IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- Use DNS Relay (selected) / Set Manually
- Primary DNS Server: 192.168.1.1
- Secondary DNS Server: (empty)
- Domain Name: localhost
- Disable DHCP / Enable DHCP Relay / **Enable DHCP Server** (selected and highlighted with a red box)
- Relay IP: 192.168.0.200
- Start(PC): 192.168.1.100
- End(PC): 192.168.1.200
- Lease Time: 86400 (Seconds)
- Edit Reserved IP Address button
- Apply (highlighted with a red box) / Refresh buttons

A red bracket on the right side of the Start(PC) and End(PC) fields is labeled "ช่วง IP" (IP Range).